

Fielders WaterGate® Leaf Guard

- Made from long life aluzinc, will not crack or warp
- DIY – Time is saved due to ease of installation
- Simply locks in and hides away




WaterGate® GUTTER Leaf Guard

- The high-strength leaf guard for your gutters
- Easy to install, suits corrugated or tiled roofing
- Reduces fire risk, prevents clogged and overflowing gutters
- Fits standard 125mm wide guttering



WaterGate® VALLEY Leaf Guard

- Purpose made leaf guard for use on corrugated or tiled roofs
- Perforated, pre-curved material which simply spring fits under tiled or iron in the valley
- One size fits domestic housing valley up to 140mm
- Purpose made for valleys ensures secure fit

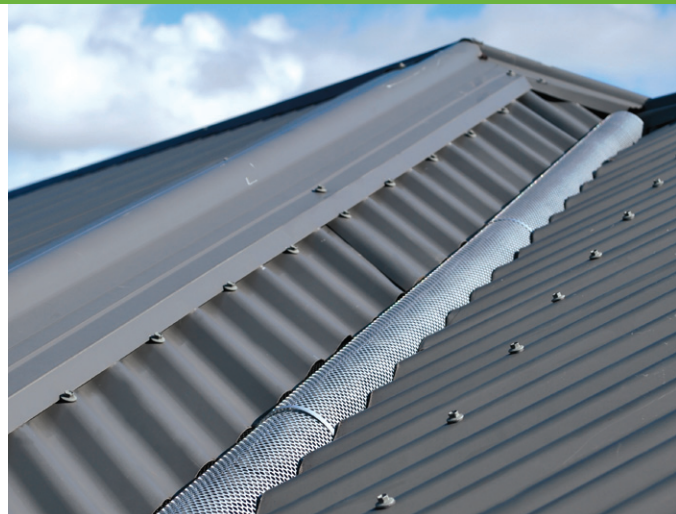

WaterGate® POP Leaf Guard

- Removable perforated grate that can be quickly installed and removed, preventing leaves, debris and other material such as tennis balls from blocking the entry to the downpipe
- Fits all downpipes up to 100mm wide




Checklist before you buy WaterGate® GUTTER Leaf Guard


- Your house has standard 125mm wide guttering
- Roof overhang is about 5cm into the gutter
- Pair of tin snips for trimming
- Thick gloves for protection

How to install your WaterGate® GUTTER Leaf Guard

Before a new roof is installed

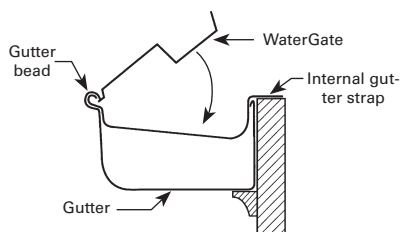


1. Insert the small 'v' shaped end of WaterGate into the gutter's outer edge bead.

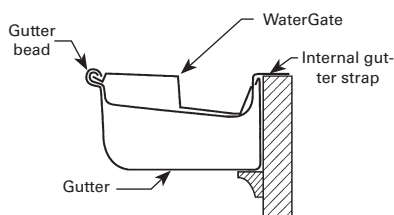

2. Lower WaterGate until it sits on the internal gutter straps.


3. Insert further lengths as per Step 1, allowing a 25mm overlap.

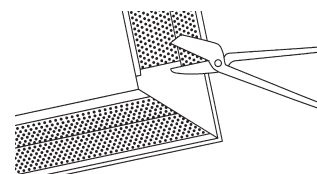


4. At gutter corners, cut to 45 degrees with tin snips and butt together.

On an existing roof & guttering


- For a tiled roof, simply slide back one row of tiles to expose the entire gutter and proceed as above for new roofing, sliding tiles back into place when finished
- On an existing steel roof:

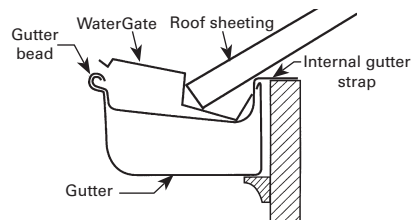

1. Position WaterGate as shown so the flat edge slips up under the roof's edge and is supported beneath by the internal gutter straps.

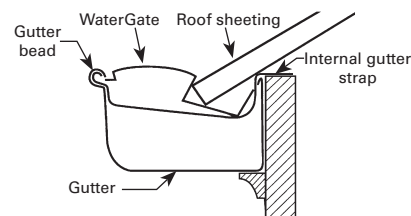


2. Wearing heavy gloves, compress the WaterGate by hand, by pushing it against the back of the gutter.

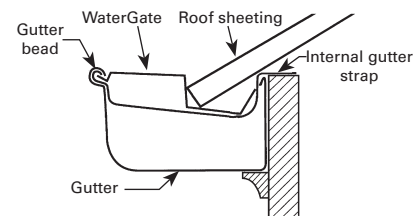

3. This will allow you to insert the outer 'v' shaped edge into the gutter's outer edge bead, clipping the WaterGate securely in place.

Guttering with external brackets

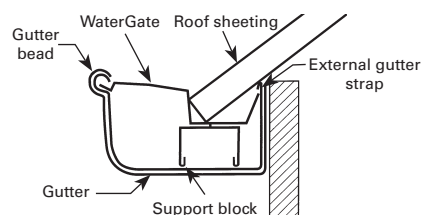

Support blocks are available from WaterGate stockists. Position support blocks one metre apart and follow diagram on left hand side for new or existing guttering.



Remember to wear thick gloves when installing WaterGate®